

## PARTS LOCATION

---

# N

**Neutral Indicator (green)**

Lights when the transmission is in neutral.

# R

**Reverse System Indicator**

Lights when the reverse system is engaged. Should also light for a few seconds and then go off when the ignition switch is turned ON.

# SIDE STAND

 
**Side Stand Indicator (amber)**

Lights when the side stand is put down. Before parking, check that the side stand is fully down; the light only indicates the side stand ignition cut-off system (page 84) is activated.



**Fuel Gauge**

Shows approximate fuel supply available (page 16).



**Coolant Temperature Gauge**

Shows coolant temperature (page 16).



**Fuel Reserve System Indicator**

When this lamp comes on while riding, there is about 3.8 liters (0.8 Imp gal, 1.0 US gal) left in the tank. Should also light for a few seconds and go off when the ignition switch is turned ON.