


FEATURES (Not required for operation)

Ventilation Louvers

This motorcycle has upper and lower ventilation louvers. Open the upper louvers to direct fresh air. Open the lower louvers and adjust the levers to direct fresh or warmed air.

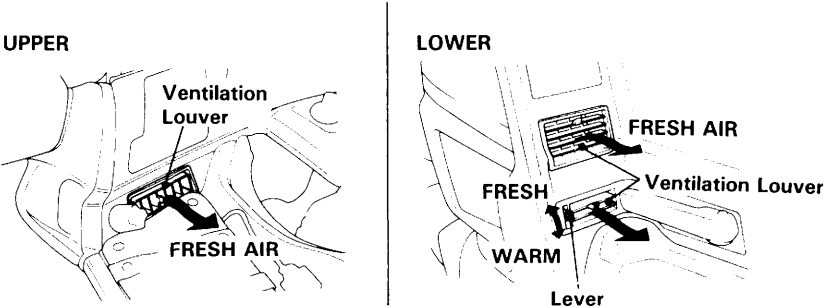

Foot Warmer Ventilation (SE only)

To direct warm air, turn the adjusting knob located near the right fairing pocket clockwise to open the ventilation lid.

