

FEATURES (Not required for operation)

Preset Stations:


You can preset six AM stations and six FM stations. Am and FM stations are preset as follows:

1. Find the station you wish by using the search lever.

NOTE:

- You cannot preset any station which is being fixed for 10 seconds in SCAN mode auto search. To preset stations in SCAN mode auto search, lightly push the search lever to fix the station you wish.
2. Push the memory (M) button and the memory indicator "CH" will blink in the display.
 3. Push the channel (PRO/CH) button and select a channel you wish, then push the memory (M) button again while the memory indicator "CH" is blinking. The indicator will stop blinking and the preset channel will be visible in the display. The memory indicator will go off 7 seconds after the memory (M) button was pushed, if the memory (M) button was not pushed again.
 4. The memory is erased automatically if you tune and preset a new AM or FM station.

The preset channels will be selected in the order in which they were preset when the memory (M) button is pushed.

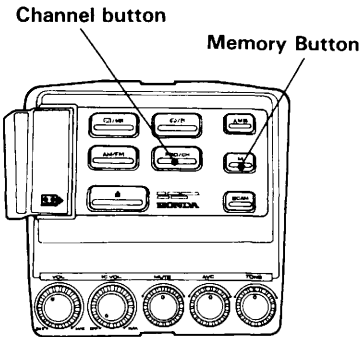

Indicator

CH