

### AM/FM Band Button:

To receive FM signals, push this button. To set to AM, push this button again. The "AM" or "FM" and "ST" (stereo signal reception only) will be visible in the display. "ST" lights up when an FM station in stereo is being received. As FM stereo reception becomes weaker, special circuits in the radio gradually blend the sound toward mono to maintain some sound quality, even though the ST indicator remains ON. Stereo reception is available only for FM stereo broadcasts, not for AM.

### Search Lever:

You can find the station you wish by using the search lever. When the lever is pushed up, the frequency moves up, and when the lever is pushed down, it moves down.

If the lever is depressed once, the AM frequency display moves in 9 kHz steps and the FM frequency in 0.05 MHz steps.

In auto search, release the lever after the frequency display moves, and the next station is automatically tuned in. Repeat the above steps until the desired station is tuned in.

When the frequency display comes to either end, transition to the other end of the band takes place and continues in the same direction.

