

# Maintenance

Please read “Importance of Maintenance” and “Maintenance Fundamentals” carefully before attempting any maintenance. Refer to “Specifications” for service data.

<b>Importance of Maintenance</b> .....	P. 33	<b>Throttle</b> .....	P. 64
<b>Maintenance Schedule</b> .....	P. 34	<b>Crankcase Breather</b> .....	P. 65
<b>Maintenance Fundamentals</b> .....	P. 37	<b>Spark Plug</b> .....	P. 66
<b>Tool Kit</b> .....	P. 48	<b>Other Adjustments</b> .....	P. 68
<b>Removing &amp; Installing Body Components</b> ....	P. 48	Headlight Aim.....	P. 68
Seat.....	P. 49	Brake Light Switch .....	P. 68
Battery .....	P. 50		
<b>Engine Oil</b> .....	P. 51		
<b>Brakes</b> .....	P. 54		
<b>Side Stand</b> .....	P. 56		
<b>Drive Chain</b> .....	P. 57		
<b>Clutch</b> .....	P. 61		