


Tyre Puncture ► Removing Wheels

## ■ Rear Wheel

### Removal

1. Support your motorcycle securely and raise the rear wheel off the ground using a maintenance stand or a hoist.
2. **(NC700SD only)**  
Release the parking brake.
3. **(NC700SD only)**  
Remove the mounting bolts and remove the parking brake caliper.

### (NC700SD only)

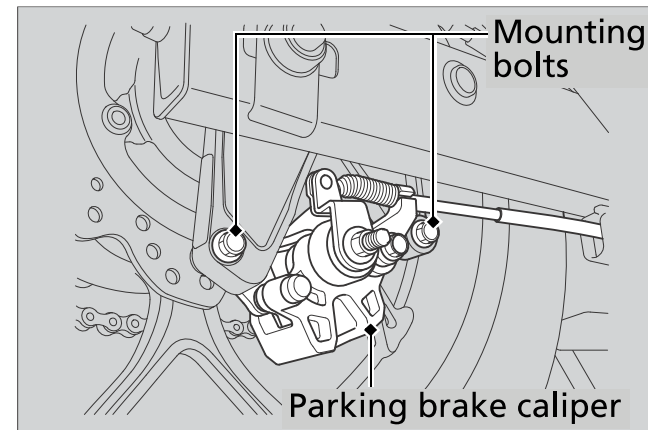

Troubleshooting

continued 103