
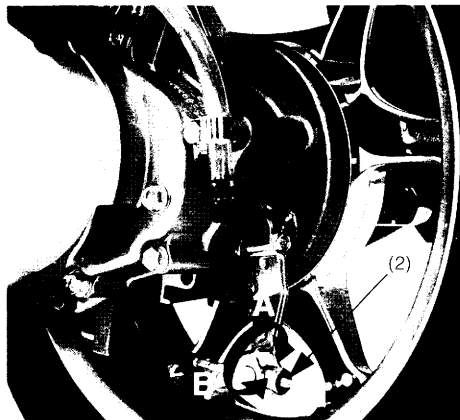


Rear brake Adjustment:

1. Measure the distance of movement on the rear brake lever (1) before the brake starts to act. The play on the front brake lever before it starts braking must be 15 - 25 mm. If necessary adjust it, turn the rear brake adjusting nut (2).

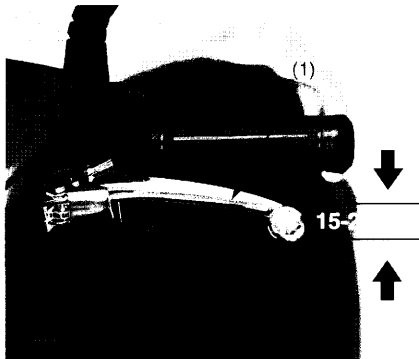

- (A) Reducing play
(B) Increasing play

- (1) Rear brake lever
(2) Adjusting nut