


Inspection

The reserve tank is located on front right side. Check the coolant level in the reserve tank (1) with the engine at normal temperature. If the liquid is below the "LOWER" level (2), remove the reserve tank cap (3) and add the coolant mixture until it reaches the "UPPER" mark (4). Always add coolant to the reserve tank. Do not attempt to add coolant by removing the radiator cap.

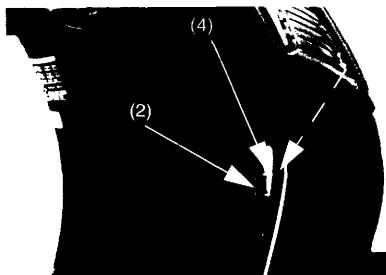

⚠ WARNING

- Do not remove the radiator cap when the engine is hot. The coolant is under pressure and could scald you.
- Keep hands and clothes away from the cooling fan, as it starts automatically.

If the reserve tank is empty, if coolant loss is excessive check for leaks and see your Honda dealer to carry out repairs.

- (1) Reserve tank
- (2) LOWER level mark (Low)
- (3) Reserve tank cap
- (4) UPPER level mark (Up)

