

2. To stop the scooter.

- Throttle is closed. The idle stop system will not function when open the throttle.
- Bring the scooter to a complete stop. The idle stop system will not function unless the scooter is brought to a complete stop.

3. To restart the engine.

- Check that the standby indicator is flashing. The engine cannot be restarted even if the throttle is opened unless the standby indicator is flashing.
- The idle stop system will be released, and standby indicator turned off unless the rider sits in the seat for more than three minutes.
- Squeeze the brake lever and press the starter button when restarting the engine with the standby with indicator not flashing.

For Safety Riding (@125/150 ES)

Observe the followings to ensure safety in the operation of the idle stop system.

- Do not leave the scooter unattended with the idle stop system in operation.
Be sure to remove the key from the ignition switch when the scooter is to be left unattended.

