
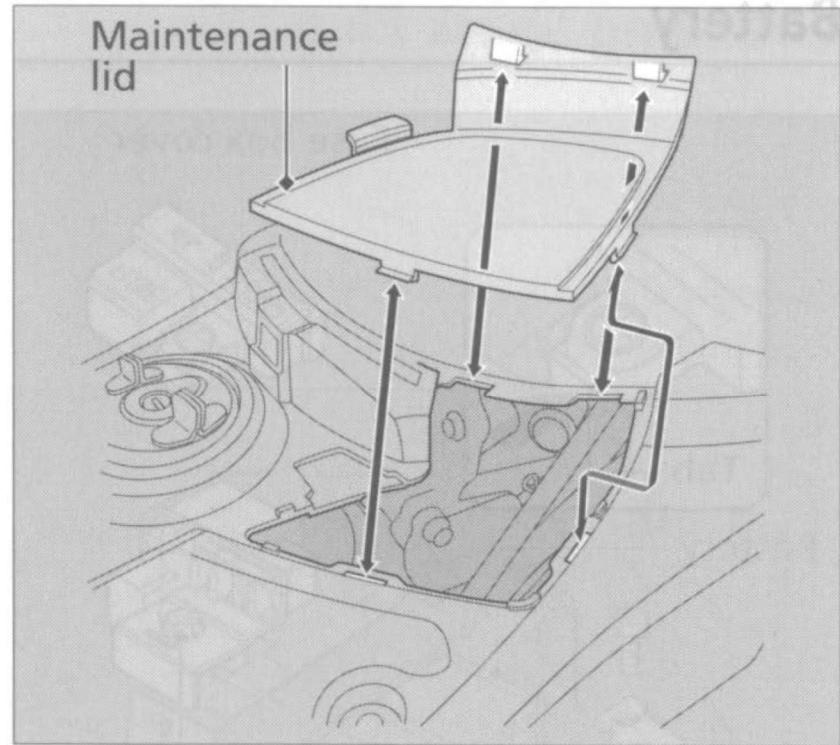


Maintenance Lid

The maintenance lid must be removed to service the spark plug.

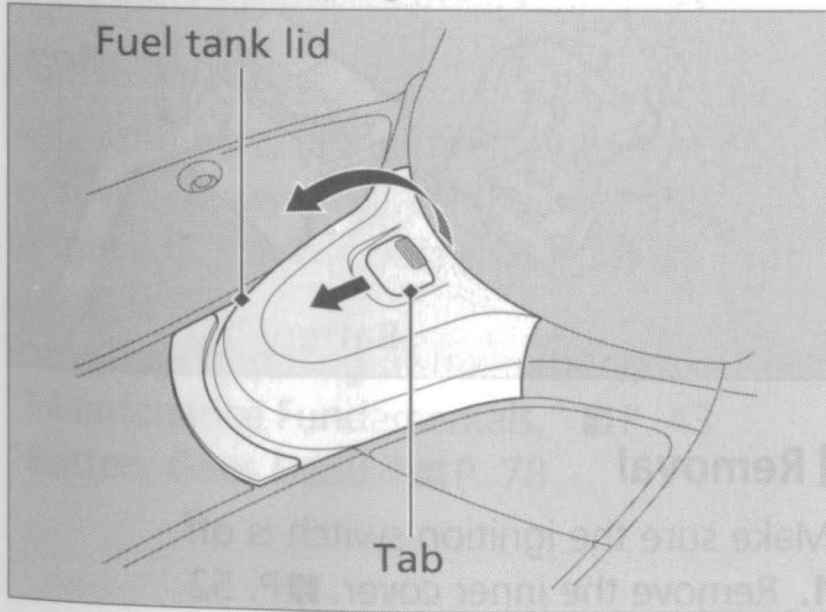

Removal

1. Pull the tab and open the fuel tank lid.
2. Remove the maintenance lid.

Installation

Install the parts in the reverse order of removal.