

Installation Notes:

- Install the axle aligning the spline with the wheel hub.
- Coat the grease to the axle threads.
- Clean the wheel hub and wheel mating surface.
- Install the rear wheel and align the index marks (1) of wheel hub with the wheel.
- Install the new cotter pin and cap securely.
- Tighten and torque the axle nuts to the specification.

Axle nut torque:

120 N·m (12 kg·m, 87 lb-ft)


- Apply each brake several times and check for free wheel rotation when released.

⚠ WARNING

- * **If a torque wrench was not used for installation, see your authorized Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.**

CAUTION:

- * **Used cotter pins may not effectively secure fasteners. Always replace used cotter pins with new ones.**

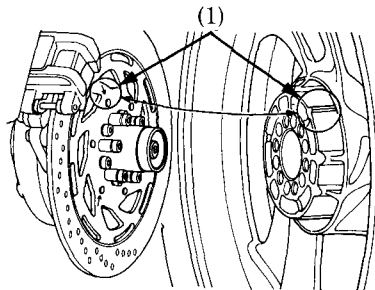

(1) Index marks