

6. With the plug washer attached, thread the spark plug in by hand to prevent cross-threading.
7. Tighten a new spark plug 1/2 turn with a spark plug wrench to compress the washer. If you are reusing a plug, it should only take 1/8—1/4 turn after the plug seats.
8. Reinstall the spark plug caps.
9. Install the remaining parts in the reverse order of removal.

CAUTION:

- * **The spark plug must be securely tightened. An improperly tightened plug can become very hot and possibly damage the engine.**
- * **Never use a spark plug with an improper heat range. Severe engine damage could result.**