

IDLE SPEED

(Refer to the maintenance precautions on page 67).

The engine must be at normal operating temperature for accurate idle speed adjustment. Ten minutes of stop-and-go riding is sufficient.

1. Warm up the engine, shift to neutral and place the motorcycle on its side stand.
2. Adjust idle speed with the throttle stop screw (1).


Idle speed

E, G, F, ED, SP, AR, IT, H type:

$1,300 \pm 100 \text{ min}^{-1} \text{ (rpm)}$ (In neutral)

SW type:

$1,300 \pm 50 \text{ min}^{-1} \text{ (rpm)}$ (In neutral)

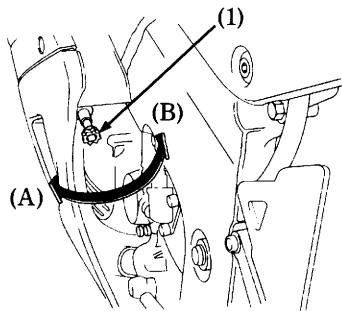

(1) Throttle stop screw

(A) Increase

(B) Decrease