



## Removal

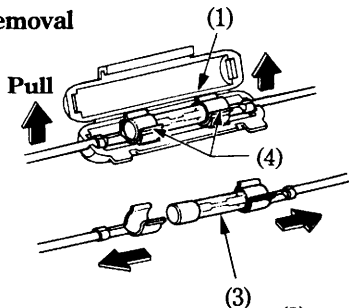

## Installation

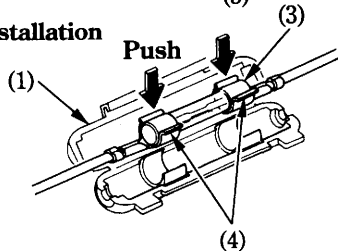

(1) Fuse holder

(4) Clips

(3) Fuses

7. Install the fuse holder and front upper cover.

If you do not have a replacement fuse with the proper rating for the circuit, install one with a lower rating.

## NOTICE

Replacing a fuse with one that has a higher rating greatly increases the chances of damaging the electrical system.

If the replacement fuse of the same rating burns out in a short time, there is probably a serious electrical problem on your scooter. Leave the blown fuse in that circuit and have your scooter checked by your Honda dealer.