

FILTERS/LUBRICATION

Replace the sealing washer every other time the oil is changed, or each time if necessary.

6. Fill the crankcase with approximately 3.6 liters (3.8 US qt 3.2 Imp qt) of the recommended oil.
7. Install the oil filler cap.
8. Start the engine and let it idle for a few minutes.
9. Stop the engine. Make sure the oil level is at the upper level mark on the inspection window (page 26) and there are no oil leaks.

NOTE:

- When running in very dusty conditions, oil changes should be performed more frequently than specified in the maintenance schedule.