


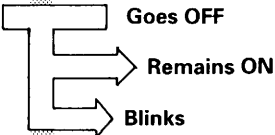

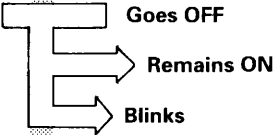


ABS and TCS Indicator Light Operation

	Ignition "ON"	After Starting to Ride	Normal: OK Not working: NG
ABS Indicator Light	 <input type="checkbox"/> Comes ON  Blinks	 	OK NG NG NG
TCS Indicator Light	<input type="checkbox"/> Comes ON  Blinks		OK NG NG NG

If either the ABS or TCS Indicator Light does not operate properly,
See your authorized Honda dealer for service.