
Over Head Cover

The right and left over head cover can be removed in the same manner.

Removal:

1. Remove the maintenance lid (page 89).
2. Remove the prongs from the grommets.
3. Remove the over head cover by removing the hooks from the slots.

Installation:

- Installation can be done in the reverse order of removal.

