


Headlight Control/Beam Control Switch (U. K. Type)


The headlight control switch ① is located on the left front fork upper cover. Operating positions of this switch are as follows :

Switch position	Function
I	Headlight off
II	Position lamp on
III	Headlight on

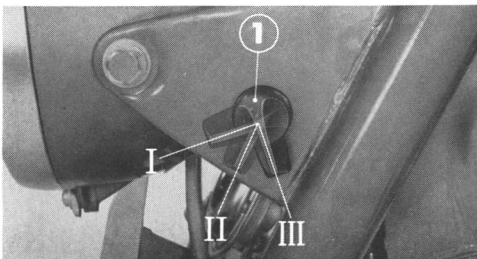

① Headlight control switch

The headlight beam control switch ② is located at right handle grip switch housing. When headlight beam control switch is placed in “L” position with headlight control switch in “III” position, headlight beam will be low. Use low beam when there is any approaching car. When it is placed in “H” position, the beam will be high.

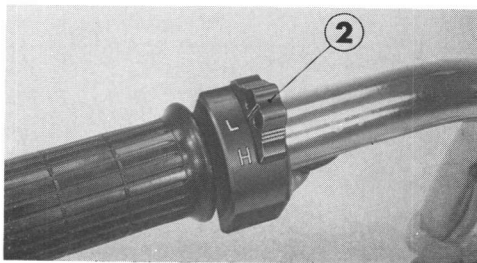

② Headlight beam control switch