



**Front brake:** Brakes are items of personal safety and should always be maintained in proper adjustment.

1. Raise the front wheel off the ground by placing a support block under the engine, spin the front wheel by hand and measure the amount. The front brake lever ① must be moved before the brake starts to take hold. The lever free play ② should be **20~30 mm (0.8~1.2 in)** at the end of the brake lever.
2. When brake adjustment becomes necessary, perform the task with the front brake adjusting nut ③. Turning the nut in the clockwise direction will decrease the play of the lever and turning the nut counter-clockwise will increase the play.

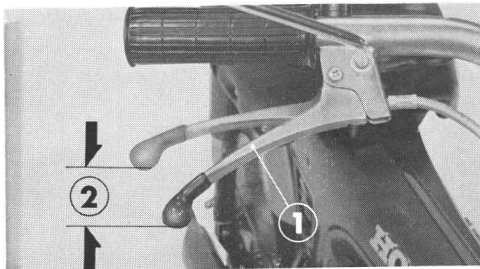

① Front brake lever    ② Free play

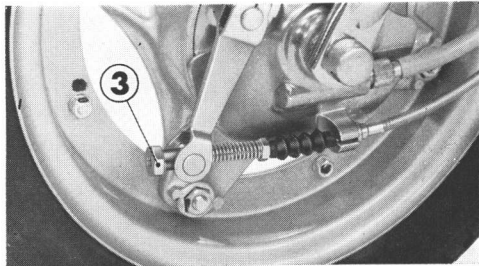

③ Front brake adjusting nut