


distilled water to bring the electrolyte to a level between the upper and lower marks. For maximum battery performance and life, only distilled water should be added, however, in an emergency situation where electrolyte level is found to be low and distilled water is not available, drinking water or a low mineral content can be used. Reinstall the cell caps.

4. When replacing the battery into the compartment, make sure that the vent tube of the battery is not pinched or blocked.

NOTE: If unusual high rate of battery electrolyte loss is experienced, consult your HONDA dealer for check of the trouble.

Air Cleaner : A clogged air cleaner will adversely affect engine performance, therefore it should be cleaned periodically as follows.

1. Unscrew the air cleaner cover setting nut and remove the air cleaner cover.
2. Remove the air cleaner element ②.
3. Wash air cleaner element in clean solvent and allow to dry thoroughly.
4. Soak air cleaner element in clean gear oil(No.80-No.90)until saturated, then

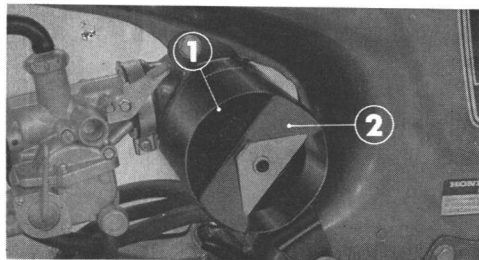

① Air cleaner case ② Air cleaner element