

## ////////////////////// FUEL AND OIL //////////////////////////////////////

### Fuel Valve

The fuel valve is mounted on the left side of the carburetor.

#### ● "S" Position.

When the fuel valve lever ① is turned to the "S" position, fuel cannot flow from the fuel tank to the carburetor. Set the valve lever in this position whenever the motorcycle is not in use.

#### ● "ON" position.


When the fuel valve lever is turned to the "ON" position, fuel will flow from the main fuel supply to the carburetor. Set the valve lever in this position when the engine is to be operated from the main fuel supply.

#### ● "RES" position.

When the fuel valve lever is turned to the "RES" position, fuel will flow from the reserve fuel supply to the carburetor. The fuel valve lever should be set in this

position only after the regular fuel supply has been consumed. The reserve fuel supply is 0.1 gal.

Switching to the reserve fuel supply this serves as a warning to the rider that it is time to refill the fuel tank. Remember to return the valve to the "ON" position after refueling.

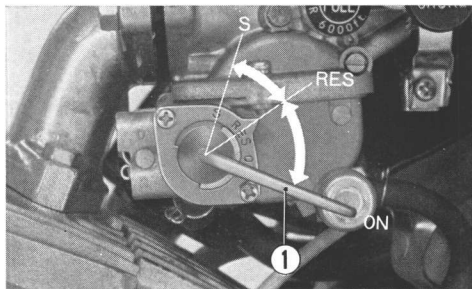

① Fuel valve lever