


MAINTENANCE OPERATIONS


Engine Oil Level

Check engine oil level at the start of each day the motorcycle is to be operated. The oil filler cap ① is located on the right crankcase cover and contains a dipstick ② for measuring oil level. Oil level must be

maintained between the upper ③ and lower ④ oil level marks on the dipstick. Oil level must be checked with the motorcycle standing upright on level ground and the oil filler cap touching the surface of the filler opening but not screwed in.

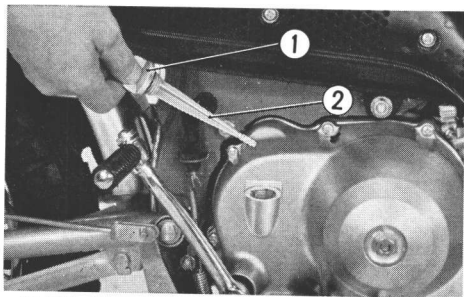

- ① Oil filler cap
- ② Dipstick

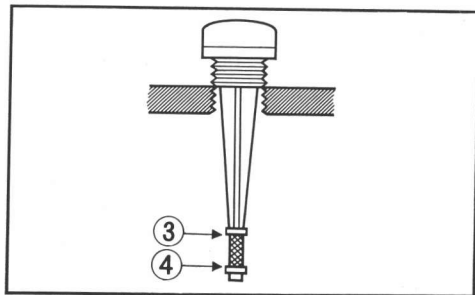

- ③ Upper oil level mark
- ④ Lower oil level mark