


Fuel Strainer Maintenance


The fuel strainer is incorporated in the carburetor body. Accumulation of dirt in the strainer will restrict the flow of fuel and cause the carburetor to malfunction; therefore, the fuel strainer should be serviced periodically.

1. Turn the fuel valve lever to the "S" position.

2. Remove the fuel strainer cover ② by removing the two retaining screws ①.
3. Remove the O-ring seal ③ and the filter screen ④.
4. Wash the cover, O-ring, and screen in solvent and reassemble. Turn the fuel valve lever to the "ON" position and check for leaks.

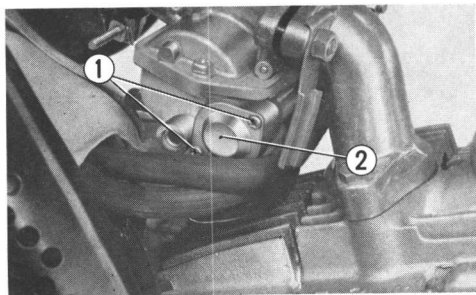

- ① Retaining screws
- ② Fuel strainer cover

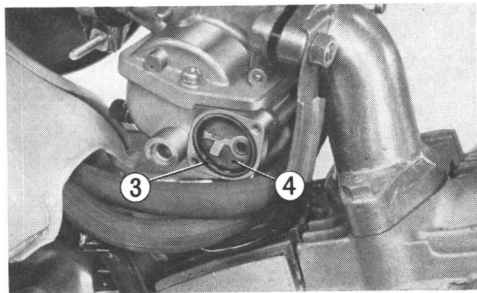

- ③ "O" ring seal
- ④ Filter screen