



- Adjust the drive chain to the proper tension, following the instructions on pages 48~49.

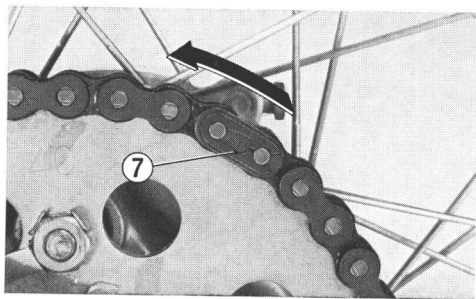

⑦ Retaining clip

Front Brake Adjustment

- Raise the front wheel off the ground by placing a support block under the engine. Spin the front wheel by hand and measure the distance the front brake lever ① must be moved before the brake starts to engage. Free play at the end of the brake lever should be **0.8~1.2 in. (20~30 mm)**. Major adjustments should be made using the adjuster located at the front wheel.

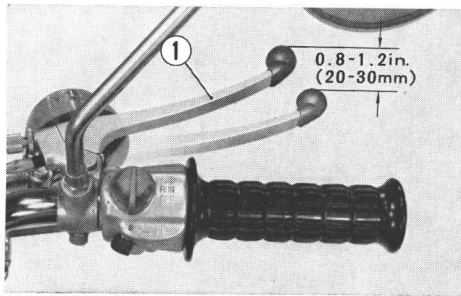

① Front brake lever