



SIDE COVER

To remove the right side cover (1) and left side cover (2), remove the screw and pull out the side covers.

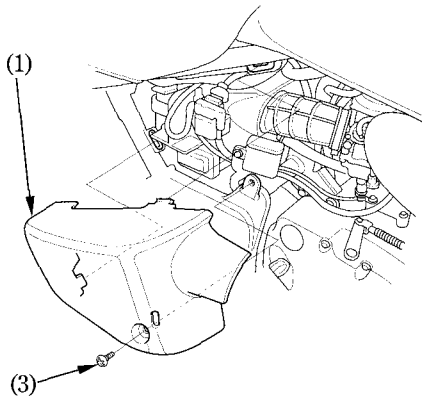

- (1) Right side cover
- (3) Screw

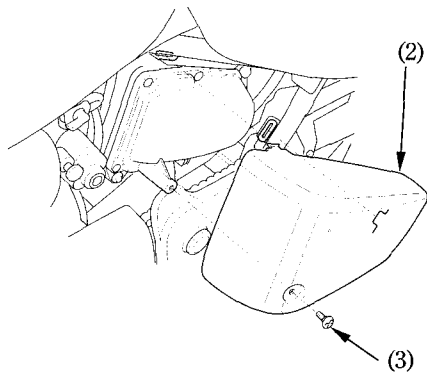

- (2) Left side cover