

Reverse Indicator Lamp

The TRX125 is equipped with a reverse indicator lamp (1) to show when the transmission is in reverse. The reverse indicator lamp is on the handlebar upper holder. The lamp lights with the ignition switch ON when the transmission is in reverse.




(1) Reverse indicator lamp

Engine Stop Switch

The three position engine stop switch (1) is next to the left handlebar grip. When the switch is in the RUN position, the engine will operate. When the switch is in either OFF position, the engine will not operate. This switch is intended primarily as a safety or emergency switch and should normally remain in the RUN position.

NOTE:

* If your TRX is stopped with the ignition switch ON and the engine stop switch OFF, the headlight may still be on, resulting in battery discharge.

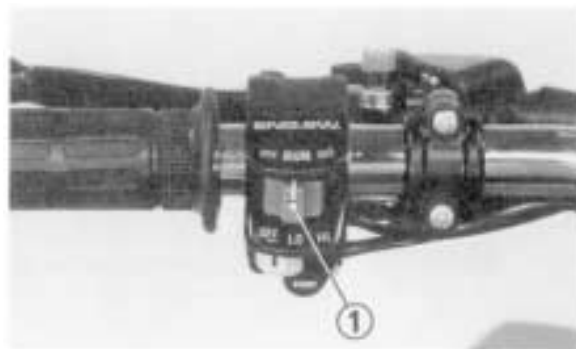

(1) Engine stop switch