

TIRES

The tires are designed specifically for vigorous off-road use, they are not immune to punctures. Always select your riding area with care.

WARNING

* *The TRX is not designed to be driven on paved surfaces. Handling and control will be severely affected.*

Tires should be inflated to the recommended pressure.

NOTE:

* Tire pressure should be checked when the tires are “cold,” before you ride.

If no air pressure gauge is available to accurately measure air pressure, this value can be estimated by measuring the circumference of the tires with a measuring tape. When inflated to the recommended pressure, the maximum tire circumference measured over the tread ribs will be approximately the standard tire circumference. The relationship between tire pressure and actual circumference varies slightly with factors of wear and stretching that occur through use.

	Front	Rear
Recommended pressure	2.9 psi (20 kPa, 0.20 kg/cm ²)	2.2 psi (15 kPa, 0.15 kg/cm ²)
Standard tire circumference	1,585 mm (62.4 in)	1,742 mm (68.6 in)
Max. pressure	3.3 psi (23 kPa, 0.23 kg/cm ²)	2.6 psi (18 kPa, 0.18 kg/cm ²)
Min. pressure	2.4 psi (17 kPa, 0.17 kg/cm ²)	1.7 psi (12 kPa, 0.12 kg/cm ²)

