

OIL FILTER SCREEN

1. Drain the engine oil.
2. Remove the right crankcase cover.
3. Remove the oil filter screen from the crankcase.
4. Clean the filter screen.

Installation

- Reinstall the oil filter screen by reversing the disassembly sequence.
- Tighten the right crankcase cover bolts to 7–11 N·m (0.7–1.1 kg·m, 5.1–8.0 ft·lb) torque.



(1) Oil filter screen