## 

## PRE-RIDE INSPECTION

## WARNING

\* Failure to conduct the listed maintenance checks and adjustments may lead to equipment failure that could cause an accident.

Inspect your FOUR TRAX every day before you ride it. The items listed here will only take a few minutes to check and in the long run can save time, expense, and possibly your life.

- 1. Engine oil level if required add engine oil (page 22). Check for leaks.
- 2. Fuel level fill the fuel tank when necessary (page 20). Check for leaks.
- 3. Brakes check operation; make sure there is no brake fluid leakage. If necessary adjust free play (pages 56-60).
- 4. Tires check condition and pressure (pages 24–25).
- 5. Drive chain check condition and slack (page 62). If necessary adjust and lubricate.
- 6. Throttle check for smooth opening and closing in all steering positions (page 61).
- 7. Headlight switch check for proper function (page 11).

- 8. Engine stop switch check for proper function (page 10).
- Nuts, Bolts, Fasteners check the wheels to see that the axle nuts are tightened and secured by cotter pins. Check the security of all other nuts, bolts and fasteners.
- 10. Steering check that the wheels turn properly as you steer the handlebars.

Correct any discrepancy before you ride. Contact your authorized Honda dealer for assistance if you cannot correct the problem.