



5. Loosen the carburetor connecting tube band screw (1).
6. Remove the nuts (2) attaching the carburetor to the engine intake pipe.
7. Remove the air cleaner (3) by removing the bolt (4).
8. Remove the carburetor.
9. Remove the float chamber.
10. Remove the standard main jet (5) and install the high altitude main jet in accordance with the chart. Reinstall the float chamber.
11. Install the carburetor. Assure that the drain screw is turned fully clockwise. Turn the fuel valve ON.
12. Start the engine. Adjust the idle speed and air screw (page 49).

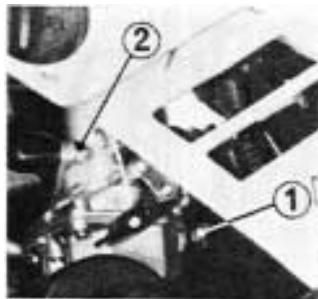

(1) Screw  
(2) Nuts

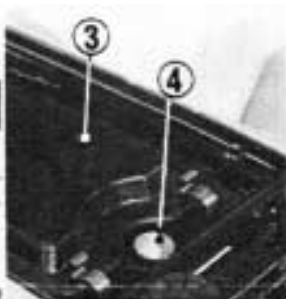

(3) Air cleaner  
(4) Bolt

#### NOTE:

- \* Adjust the idle speed and air screw at high altitude to ensure proper high altitude operation.

#### Removal:

1. Follow installation steps 1–9.
2. Reinstall the original main jet.
3. Reinstall the carburetor. Adjust the idle speed and air screw.

#### NOTE:

- \* Adjust the idle speed at low altitude to ensure proper low altitude operation.



(5) Main jet