

7. Inflate the tires to their recommended pressures. Place the FOUR TRAX on blocks to raise all of the tires off the ground.
8. Cover the FOUR TRAX (don't use plastic or other coated materials) and store in an unheated area, free of dampness with a minimum of daily temperature variation. Do not store the FOUR TRAX in direct sunlight.

Removal from Storage

1. Uncover and clean the FOUR TRAX. Change the engine oil if more than 4 months have passed since the start of storage.
2. Check the voltage and slow charge the battery if it is below 12.8V. Install the battery.
3. Drain any excess aerosol rust-inhibiting oil from the fuel tank. Fill the fuel tank with fresh gasoline.
4. Perform all Pre-ride Inspection checks (page 26). Test ride the FOUR TRAX at low speeds in a safe riding area.