


Front and Rear Wheel Removal

1. Place a support block under the vehicle and raise the front and rear wheels off the ground.
2. Loosen the wheel nuts (1) with a 17 mm socket wrench.
3. Remove the wheels.

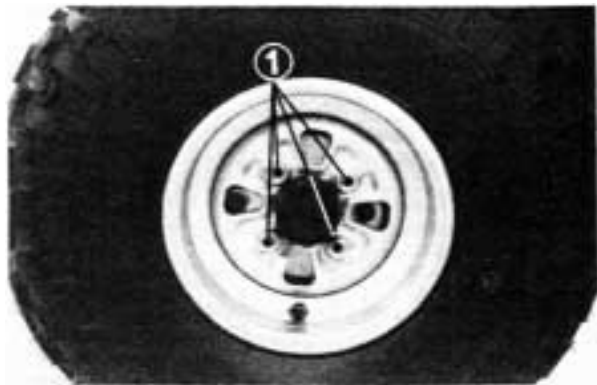

(1) Wheel nuts

Installation:

Reinstall the front and rear wheels and tighten the wheel nuts (1) in a cross-pattern, torquing them to 60–70 N·m (6.0–7.0 kg·m, 43–50 ft·lb).

WARNING

- * *If a torque wrench was not used for installation, see your authorized Honda dealer as soon as possible to verify proper assembly.*
- * *Install the wheels with the tire valve facing the outside.*
- * *Install the wheel nuts with their tapers on the inside as shown.*

