

Parking Brake

Parking brake adjustment may be required if the parking brake does not hold properly.

Parking Brake Adjustment:

1. Remove the fuel tank cap brether tube (1) from the handlebar cover.
2. Remove the two dust caps (2), the two screws (3) and the handlebar cover (4).

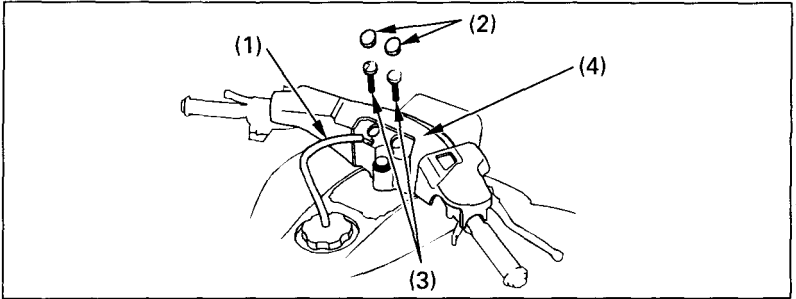


Fig. 4-26 (1) Fuel tank cap brether tube (2) Dust cap
(3) Screws (4) Handlebar cover

3. Temporarily adjust the clutch lever free play to more than 30 mm (1.2 in) (page 107).
4. Loosen the lock nut (1) on the parking brake cable, and screw in the adjuster (2) completely.
5. Loosen the lock nut (3) on the parking brake arm (4) and turn the adjusting bolt (5) clockwise until you feel resistance.
6. Then turn the adjusting bolt (5) 1/8 counterclockwise, and tighten the lock nut (3).

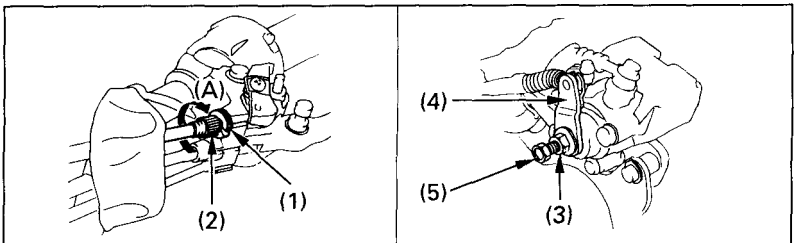


Fig. 4-27 (1) Lock nut (2) Adjuster (A) Screw in
(3) Lock nut (4) Parking brake arm (5) Adjusting bolt