

### **Reverse and Neutral Indicator Lamp**

The reverse indicator lamp ( 1 ) and the neutral indicator lamp ( 2 ) (Fig. 2-13) are next to the ignition switch.

The reverse indicator lamp will light when the transmission is in reverse and the ignition switch is ON. The neutral indicator lamp will light when the transmission is in neutral and the ignition switch is ON.