

Clutch adjustment.....	108
Consumer information	145
Crossing slopes.....	76
Customer service	146

D

Decompressor lever.....	18
Dimmer switch	20
Dipstick	28, 100
Direct current (DC) power	
Receptacle.....	32
Special plug	32

E

Engine	
Idle speed adjustment.....	99
Break-in procedures	ii
Flooded engine.....	60
Starting the engine	57
Engine oil	
Changing oil.....	102
Checking oil level and adding oil.....	100
Oil filler cap/dipstick	28, 100
Oil filter	102
Oil high temperature indicator lamp.....	20
Recommendations	101
Engine stop switch	14
Exhaust system	
Cleaning.....	37
Purging.....	132

F

Final gear case oil	105
Flag pole bracket.....	30
Flooded engine	60
Fuel	
Fuel recommendations	88
Fuel strainer screen.....	90
Fuel fill cap.....	26, 86
Fuel tank cap vent lever	26
Fuel tank capacity.....	86
Fuel valve.....	26