


If a Fuse Blows

Circuit Fuses Access

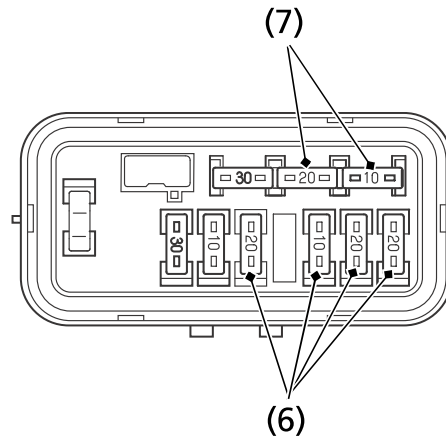

(6) circuit fuses

(7) spare fuses

6. To check or replace a circuit fuse (6), pull the old fuse out of its retaining clips.
If the fuse is blown, replace it with a spare fuse (7) of the same rating.

If you do not have a replacement fuse with the proper rating for the circuit, install one with a lower rating.

NOTICE

Replacing a fuse with one that has a higher rating greatly increases the chance of damage to the electrical system.

7. Install the fuse box cover.
8. Install the rear fender cover.
9. Install the seat.

226 Taking Care of the Unexpected