


■ Rear Wheel

Removal

1. Support your motorcycle securely and raise the rear wheel off the ground using a maintenance stand or a hoist.
2. Loosen the muffler band bolt.
3. Remove the muffler stay bolt, nut and washers.

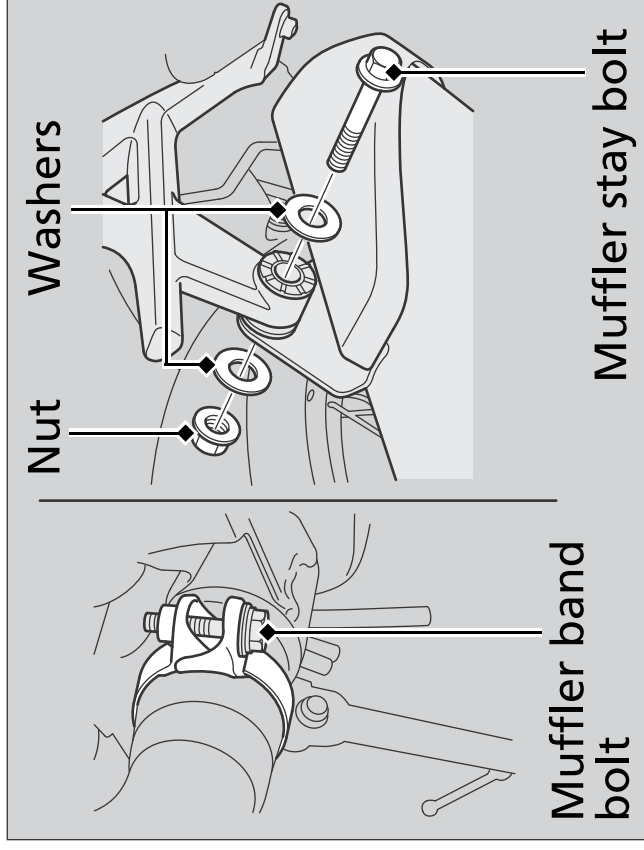

4. Move the muffler outward.
5. Remove the rear wheel nuts, and remove the rear wheel.

