

Installation

1. To install the rear wheel, reverse the removal procedure.
2. Install the rear wheel and tighten the rear wheel nuts equally.

Torque: 108 N·m (11 kgf·m, 80 lbf·ft).

3. Tighten the muffler band bolt.

Torque: 17 N·m (1.7 kgf·m, 13 lbf·ft).

4. Check that the wheel rotates freely.

If a torque wrench was not used for installation, see your dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.