


Other Checks:

Make sure there are no fluid leaks. Check for deterioration or cracks in the hose and fittings.

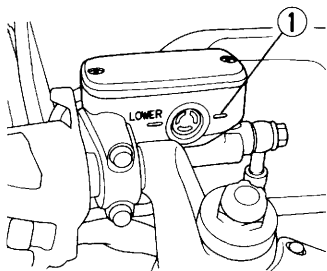


(1) LOWER level mark

Clutch Lever:

The distance between the tip of the clutch lever (1) and the grip can be adjusted by turning the adjuster (2).

CAUTION:

* **Align the arrow (3) on the clutch lever with the index mark (4) on the adjuster.**

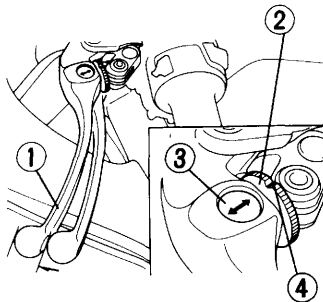

(1) Clutch lever
(2) Adjuster

(3) Arrow
(4) Index mark