


SIDE COVER


To remove the side cover (1), turn the slot (2) counterclockwise, pull the front of the cover out until the hooks (3) is free of retaining grommets, and slide the cover forward in the arrow direction (A).

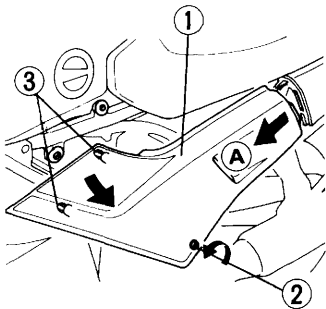

- (1) Side cover
- (2) Slot
- (3) Hooks

REAR SEAT COVER

Remove the screws (1) and rear seat cover (2) when riding with a passenger or removing the seat.

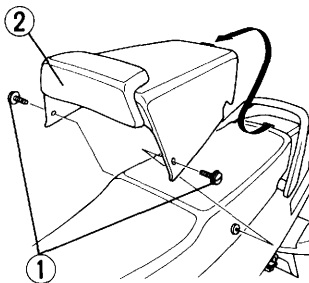

- (1) Screws
- (2) Rear seat cover