

SPARK PLUGS

(Refer to the maintenance precautions on page 60).

Recommended plugs:

Standard:


CR8EH-9 (NGK) or

U24FER-9 (NIPPONDENSO)

For extended high speed riding:

CR9EH-9 (NGK) or

U27FER-9 (NIPPONDENSO)

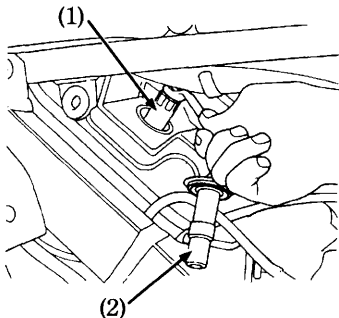


- (1) Spark plug wrench
- (2) Spark plug cap

1. To remove the spark plug from the rear cylinder, remove the tank stay mounting bolt (3) and nut (4).

Lift the tank slightly and insert the shorter maintenance plug bar (5) into hole in the tank and longer one into the hole in the frame as shown in the drawing.

2. Remove the spark plug cap (2) from the spark plug, and remove the spark plug using the special plug wrench (1) furnished in the tool kit.

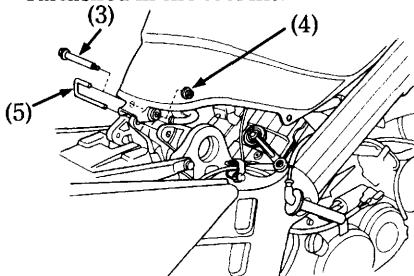

- (3) Tank stay mounting bolt
- (4) Tank stay mounting nut
- (5) Maintenance plug bar