

## Front/Rear Turn Signal Bulb

### **▲ WARNING**

- \* **The light bulb becomes very hot while the light is ON, and remain hot for a while after it is turned OFF. Be sure to let it cool down before servicing.**

### **CAUTION:**

- \* **Wear clean gloves while replacing the bulb.**

### **NOTE:**


- \* **Be sure to turn the ignition switch OFF when replacing the bulb.**

1. Remove the rear turn signal lens from the turn signal by removing the screw (1).

To replace the front turn signal bulb, remove the middle fairing (page 43).

2. Turn the socket (2) 90° in either direction, then pull it out toward you.
3. Slightly press in on the bulb (3) and turn in 90° counterclockwise. Remove the bulb.

### Rear

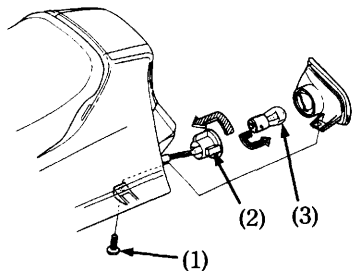

- (1) Screw bolt  
(2) Socket

(3) Bulb