

(Ref.No.) Description	Function						
(11) SELECT button	<p>Except E, EK type: This button is used to select the coolant or air temperature meter or to adjust the time.</p> <p>For E, EK type: This button is used to select the coolant or air temperature meter or to adjust the time or to change the speed and mileage units for the speedometer/odometer/tripmeter.</p>						
(12) Left multi-function display	<p>The display includes the following functions; This display shows the initial display (page 18).</p> <table border="1" data-bbox="147 574 1285 815"> <tbody> <tr> <td data-bbox="147 574 519 645">Speedometer</td> <td data-bbox="519 574 1285 645">Shows riding speed (page 23).</td> </tr> <tr> <td data-bbox="147 645 519 749">Coolant temperature meter</td> <td data-bbox="519 645 1285 749">Shows coolant temperature (page 21).</td> </tr> <tr> <td data-bbox="147 749 519 815">Air temperature meter</td> <td data-bbox="519 749 1285 815">Shows air temperature (page 22).</td> </tr> </tbody> </table>	Speedometer	Shows riding speed (page 23).	Coolant temperature meter	Shows coolant temperature (page 21).	Air temperature meter	Shows air temperature (page 22).
Speedometer	Shows riding speed (page 23).						
Coolant temperature meter	Shows coolant temperature (page 21).						
Air temperature meter	Shows air temperature (page 22).						