

ITEM	FREQUENCY	WHICHEVER → COMES FIRST ↓ NOTE	ODOMETER READING [NOTE (1)]								REFER TO PAGE
			× 1,000 km	1	6	12	18	24	30	36	
			× 1,000 mi	0.6	4	8	12	16	20	24	
		NOTE	MONTH								
* FUEL LINE						I		I		I	—
* THROTTLE OPERATION						I		I		I	104
AIR CLEANER		NOTE (2)					R			R	94
SPARK PLUGS						EVERY 24,000 km (16,000 mi) I, EVERY 48,000 km (32,000 mi) R				99 – 103	
* VALVE CLEARANCE								I			—
ENGINE OIL				R		R		R		R	95 – 98
ENGINE OIL FILTER				R		R		R		R	96 – 98
* ENGINE IDLE SPEED				I	I	I	I	I	I	I	105
RADIATOR COOLANT		NOTE (3)				I		I		R	36 – 37
* COOLING SYSTEM						I		I		I	—
* SECONDARY AIR SUPPLY SYSTEM						I		I		I	—