


Engine Oil ► Changing Engine Oil & Filter

6. Remove the oil filter with a filter wrench and let the remaining oil drain out. Make sure the prior seal is not stuck to the engine.

► Discard the oil and oil filter at an approved recycling centre.

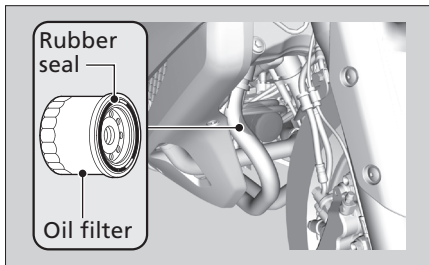

7. Apply a thin coat of engine oil to the rubber seal of a new oil filter.
8. Install a new oil filter and tighten.

Torque: 26 N·m (2.7 kgf·m, 19 lbf·ft).

9. Replace the sealing washer. Install the drain bolt and tighten.

Torque: 30 N·m (3.1 kgf·m, 22 lbf·ft).

10. Fill the crankcase with the recommended oil (►P.47) and install the oil fill cap.

Required oil

When changing oil & engine oil filter:

3.1 litres (3.3 US qt, 2.7 Imp qt)

When changing oil only:

2.9 litres (3.1 US qt, 2.6 Imp qt)

11. Check the oil level. ►P.61

12. Check that there are no oil leaks.