

## TYRES

Proper air pressure will provide maximum stability, riding comfort and tyre life. Check tyre pressure frequently and adjust if necessary.

### NOTE:

\* Tyre pressure should be checked before you ride while the tyres are "cold".

On-road tyres are standard on this model. Select the right replacement tyres in accordance with the following specifications.

Check the tyres for cuts, embedded nails, or other sharp objects. See your authorized Honda dealer for replacement of damaged tyres or punctured inner tubes.

		Front	Rear
Tyre size		100/90-19 57S	170/80-15 M/C 77S
Cold tyre pressures kpa (kg/cm <sup>2</sup> , psi)	Rider only	200 (2.00, 29)	200 (2.00, 29)
	Rider and one passenger	200 (2.00, 29)	250 (2.50, 36)
Tyre brand BRIDGESTONE DUNLOP		L309 F24	G546 K555