


## Inspection

The reserve tank is behind the radiator.

Place the motorcycle on its side stand on a firm, level surface.

Check the coolant level in the reserve tank (1) while the engine is at the normal operating temperature. If the coolant level is below the rear end (2) of the LOWER level mark (3), remove the reserve tank cap (4) and add coolant mixture until it reaches the rear end of the UPPER level mark (5). Always add coolant to the reserve tank.

Do not attempt to add coolant by removing the radiator cap.

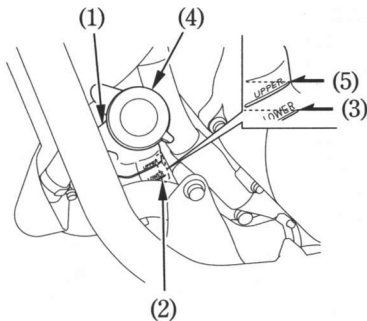

- (1) Reserve tank
- (2) Rear ends
- (3) LOWER level mark
- (4) Reserve tank cap
- (5) UPPER level mark

If the reserve tank is empty, or if coolant loss is excessive, check for leaks and see your Honda dealer for repair.