

FEATURES


(Not required for operation)

STEERING LOCK

The steering lock (1) is on the steering column.

To lock the steering, turn the handlebar all the way to left, insert the ignition key (2) into the lock, turn the key 180° clockwise while pushing in and remove it.

To unlock the steering, perform the locking sequence in the reverse order.

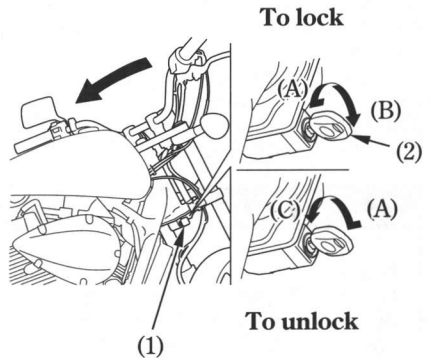

- (1) Steering lock
- (2) Ignition key

- (A) Push in
- (B) Turn clockwise
- (C) Turn counterclockwise