

| ITEM | FREQUENCY | WHICHEVER → COMES FIRST ↓ NOTE | ODOMETER READING [NOTE (1)] | | | | | | | | Refer to page | |
|------|------------------------|--|-----------------------------|------------------------------|---|----|----|----|----|----|---------------------|--------------|
| | | | × 1,000 km | 1 | 6 | 12 | 18 | 24 | 30 | 36 | | |
| | | | × 1,000 mi | 0.6 | 4 | 8 | 12 | 16 | 20 | 24 | | |
| | | NOTE | MONTH | | | | | | | | | |
| | DRIVE CHAIN | | | I, L EVERY 1,000 km (600 mi) | | | | | | | | 90 |
| | DRIVE CHAIN SLIDER | | | | | I | | | I | | | 96 |
| | BRAKE FLUID | NOTE (4) | | | I | I | R | I | I | R | | 29 |
| | BRAKE SHOES/PADS WEAR | | | | I | I | I | I | I | I | | 106, 107 |
| | BRAKE SYSTEM | | | I | | I | | I | | I | | 28, 106, 107 |
| * | BRAKELIGHT SWITCH | | | | | I | | I | | I | | 113 |
| * | HEADLIGHT AIM | | | | | I | | I | | I | | 58 |
| | CLUTCH SYSTEM | | | I | I | I | I | I | I | I | | 32 |
| | SIDE STAND | | | | | I | | I | | I | | 98 |
| * | SUSPENSION | | | | | I | | I | | I | | 97 |
| * | NUTS, BOLTS, FASTENERS | | | I | | I | | I | | I | | — |
| ** | WHEELS/TYRES | | | I | I | I | I | I | I | I | | — |
| ** | STEERING HEAD BEARINGS | | | I | | I | | I | | I | | — |