


5. To remove the plug from the front cylinder, remove the spark plug cap (7) from the spark plug, and remove the spark plug using the special plug wrench (8) furnished in the tool kit.
6. Inspect the electrodes and center porcelain for deposits, erosion or carbon fouling. If the erosion or deposit is heavy, replace the plug. Clean a carbon or wet-fouled plug with a plug cleaner.

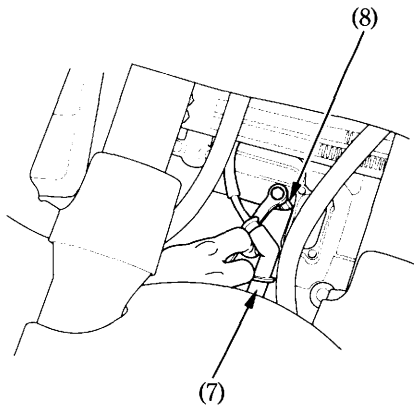

- (7) Spark plug cap  
(8) Spark plug wrench